


Electric Standing Desk

Model:SD02

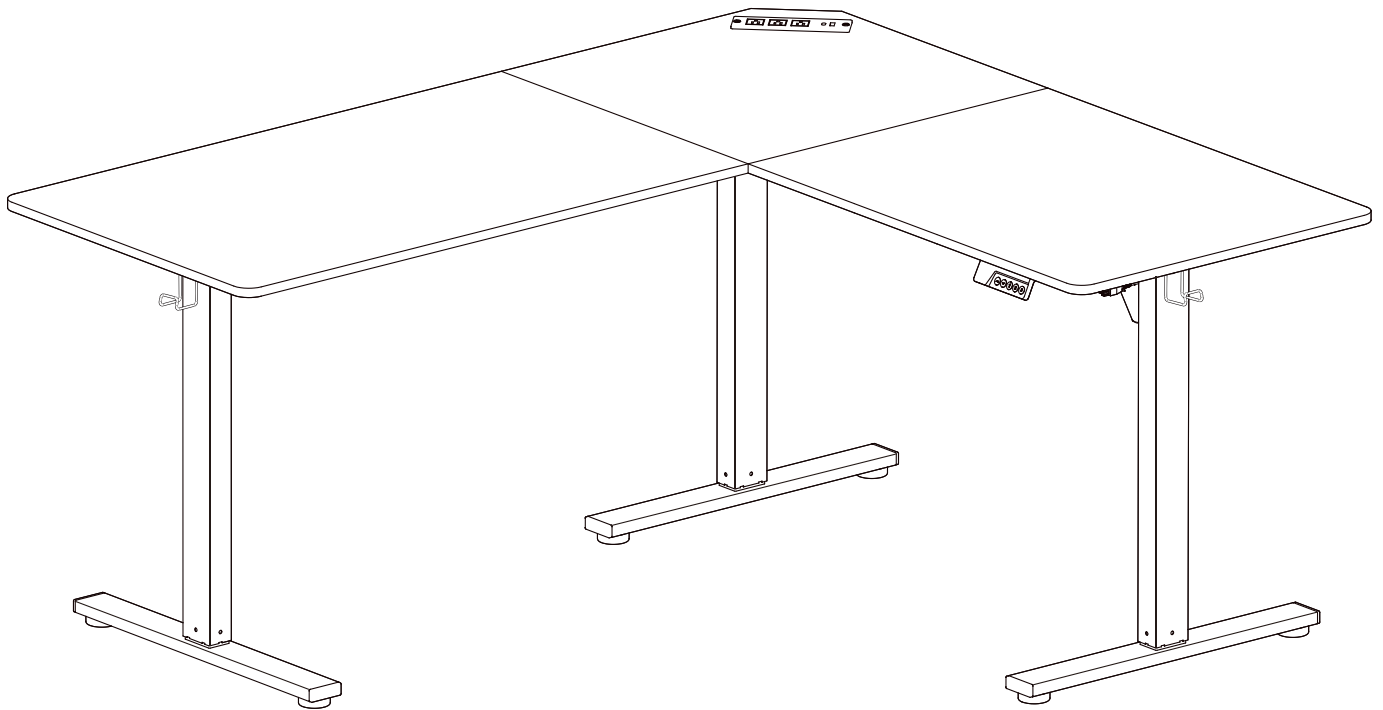

Contact info



Email: Desk-aftersale@outlook.com

Generally Guidelines


Before assembling, please check whether all the spare parts are complete or damaged, if there is a lack of contact after-sales processing.









Prior to installation, we recommend placing a cloth underneath the product to protect the floor and the product.

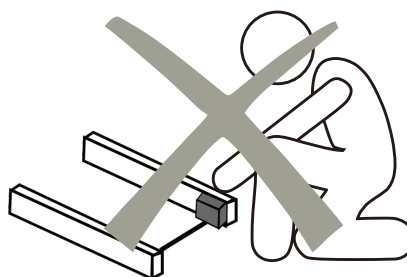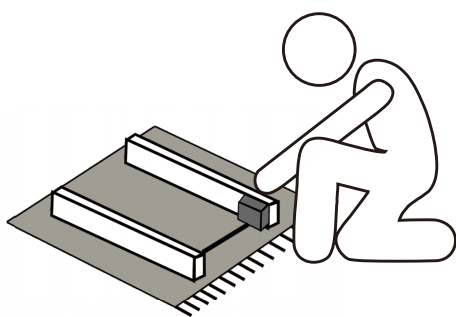

Components Identification

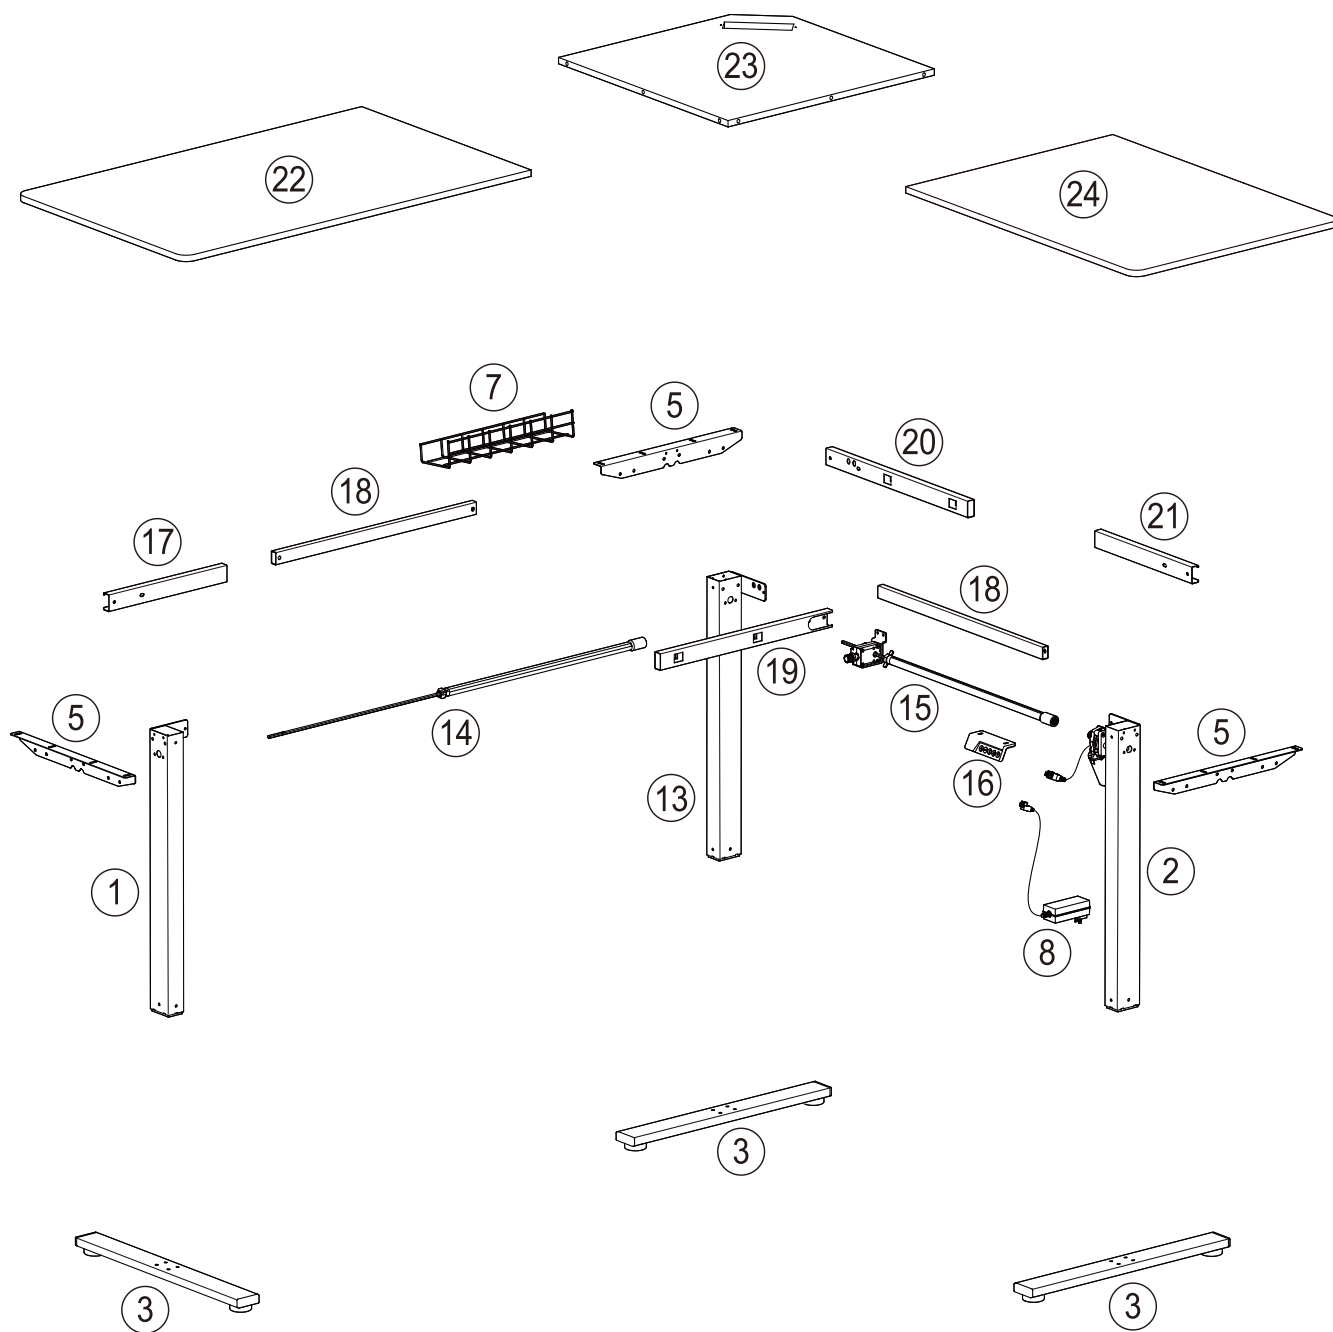

Hardware Identification

     
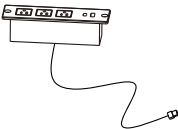
L		M6*35 mm	12pcs
M		M6*12 mm	72pcs
N		M4*12 mm	4pcs
X		4mm Allen Wrench	1pc
O		4mm Allen Wrench	1pc
P		Cross Allen Wrench	1pc
Q		Dowel	6pcs
R		Cable Ties	8pcs
S		Hooks	2pcs
W		Fastener	6pcs
U		Desktop reinforcement	3pcs
V		Power Strip	1pc

Installation Steps



Step 1

Please choose whether you need the **long side** to be on the **left** or on the **right** before installation.

L

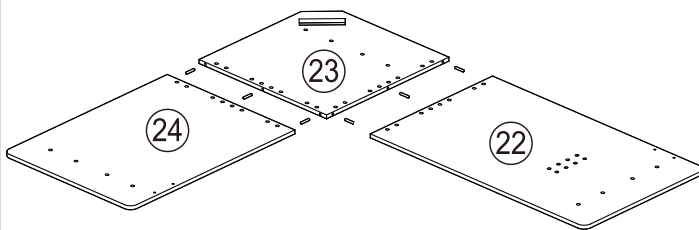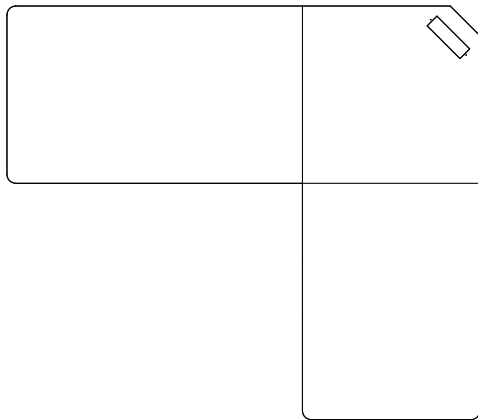

R

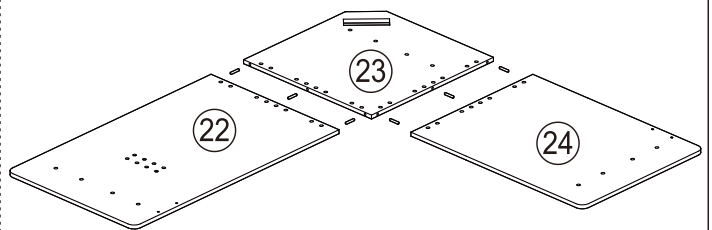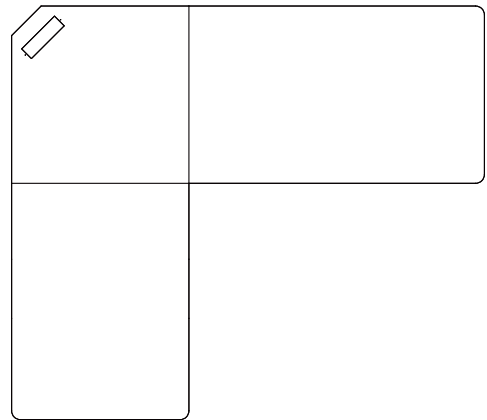


Q



X6

Note: Do not fully tighten the screws until all of them are in place.


Step 2

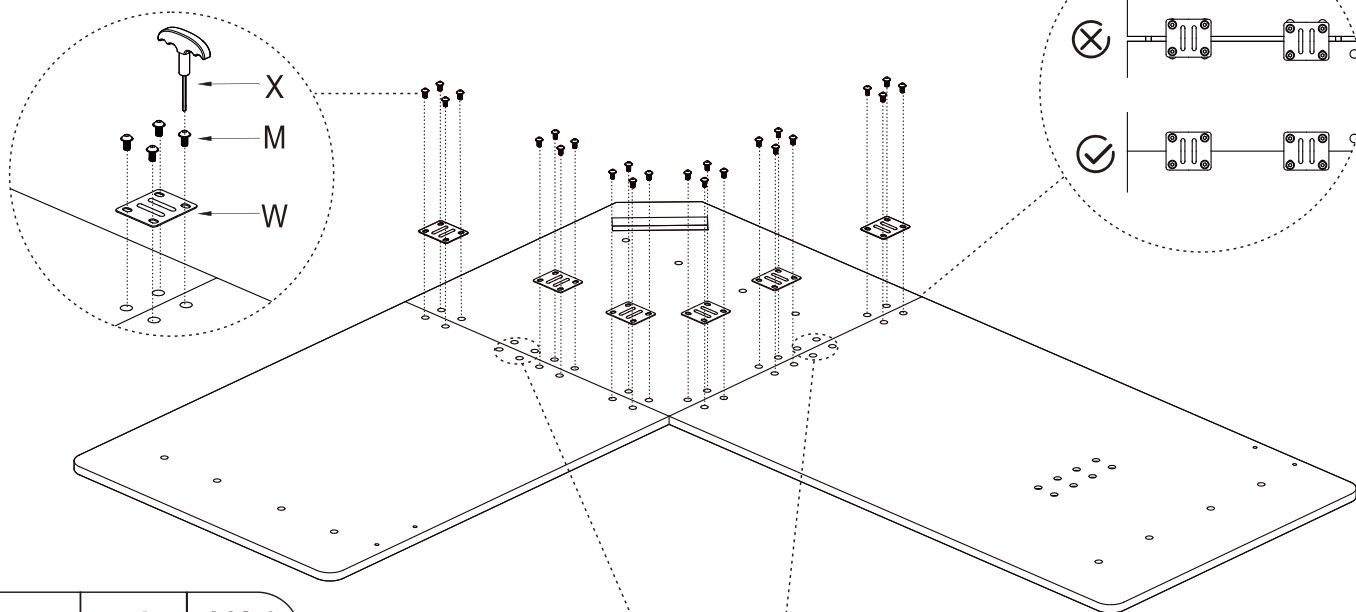

M		X24
W		X6
X		X1

NOTE : The hole positions circled **don't** need to be installed now.


Step 3

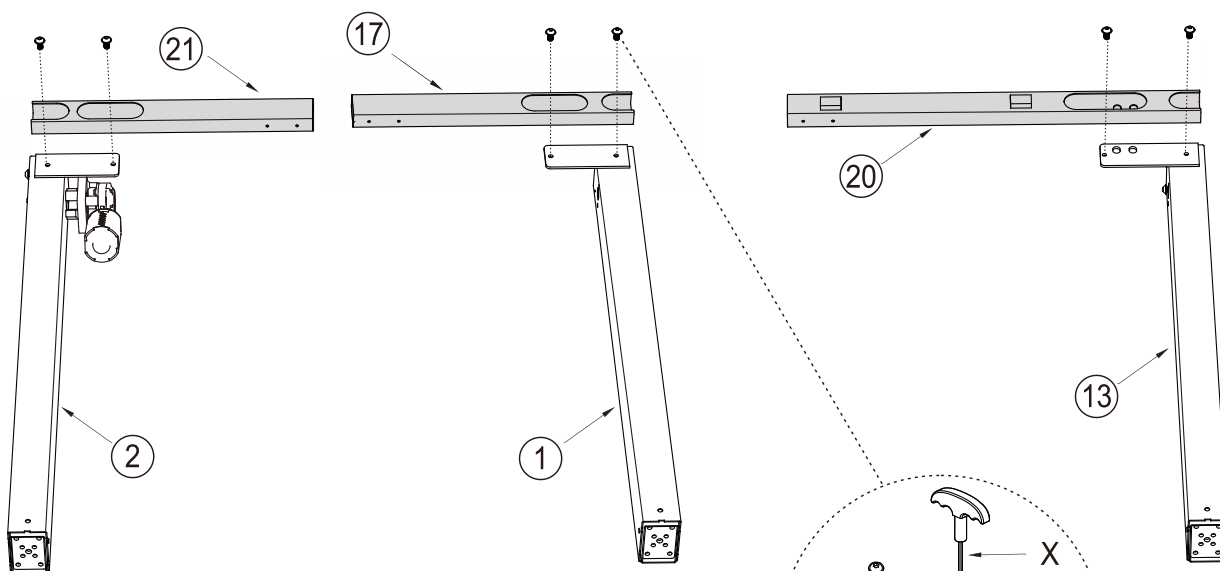


M		X6
X		X1

Note: Do not fully tighten the screws until all of them are in place.

Step 4

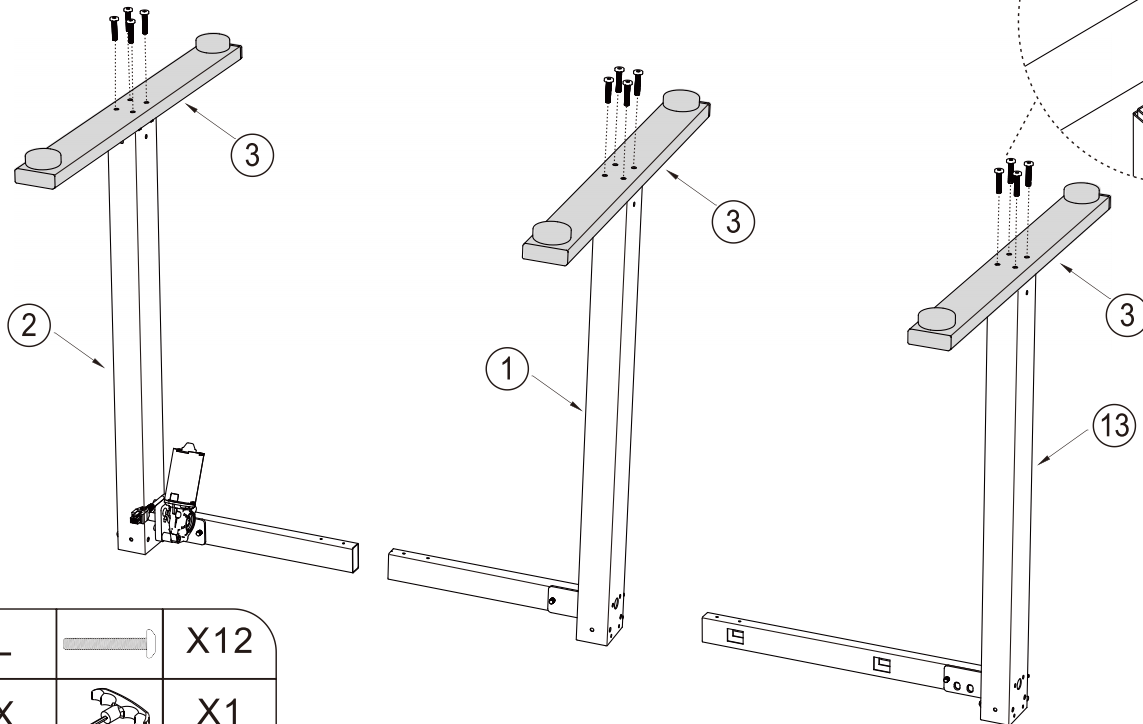


Step 5

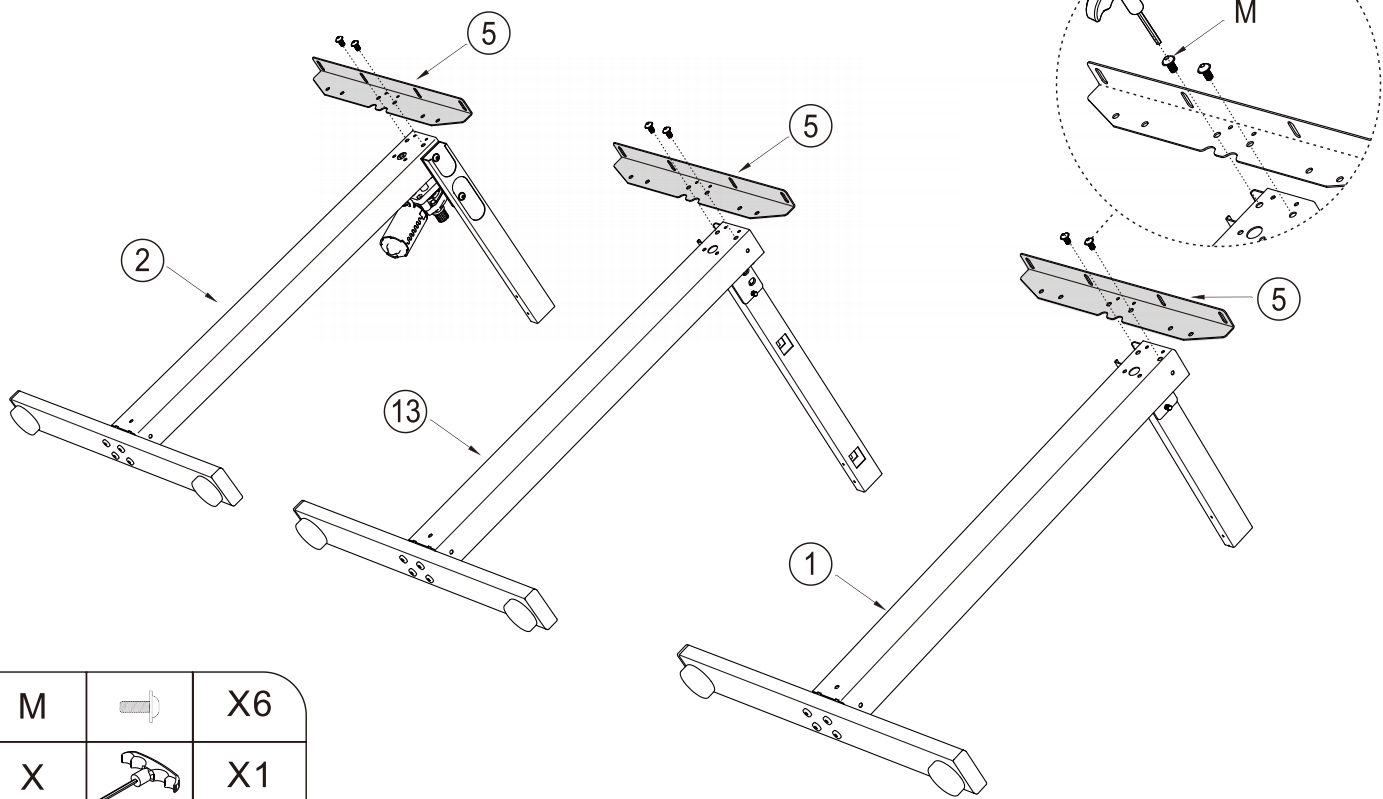


Note: Do not fully tighten the screws until all of them are in place.

Step 6

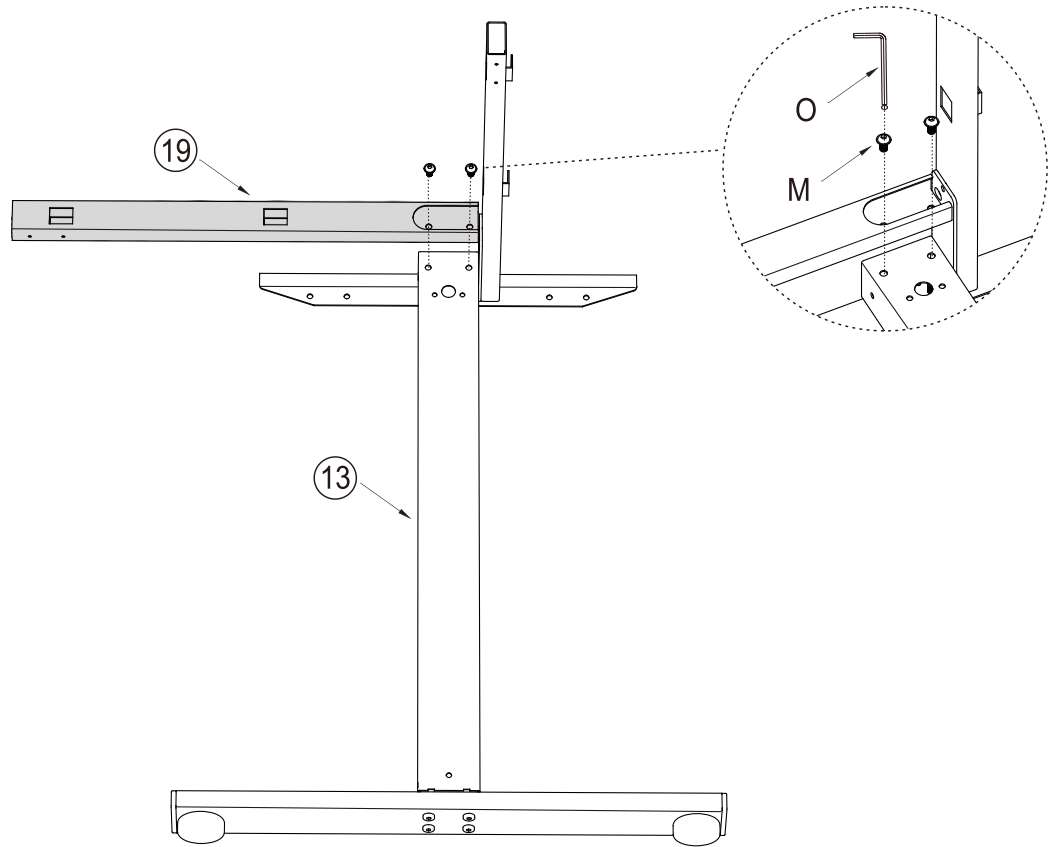


M		X2
O		X1

Step 7

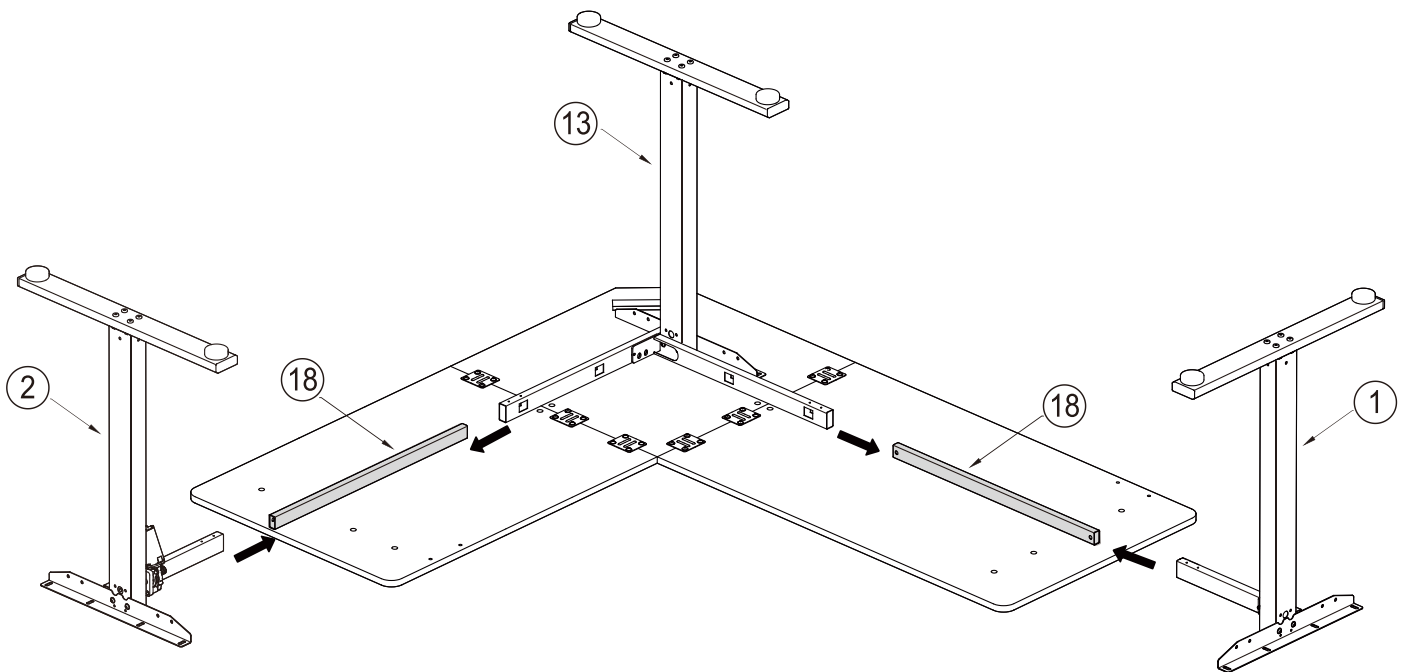



Note: Do not fully tighten the screws until all of them are in place.

Step 8

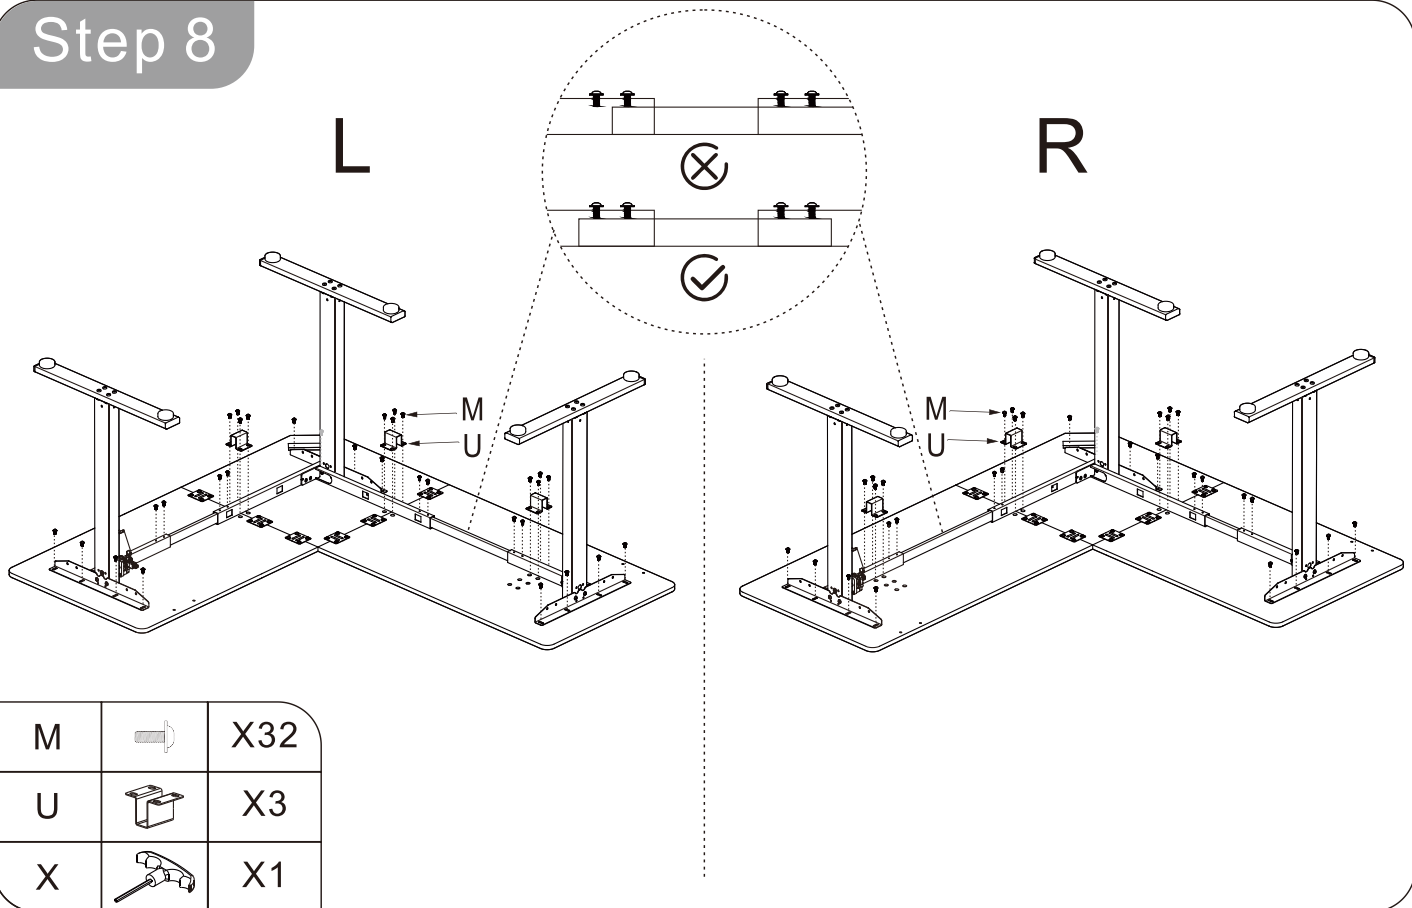

Step 9





- I. Rotate the lock to adjust the length of motor rod.
- II. Insert the rod into the hole on one side leg until it stops.
- III. Connect the other side of the rod to the motor, and then tighten the transmission rod and the lock in the middle.
- IV. Fixed commutator.

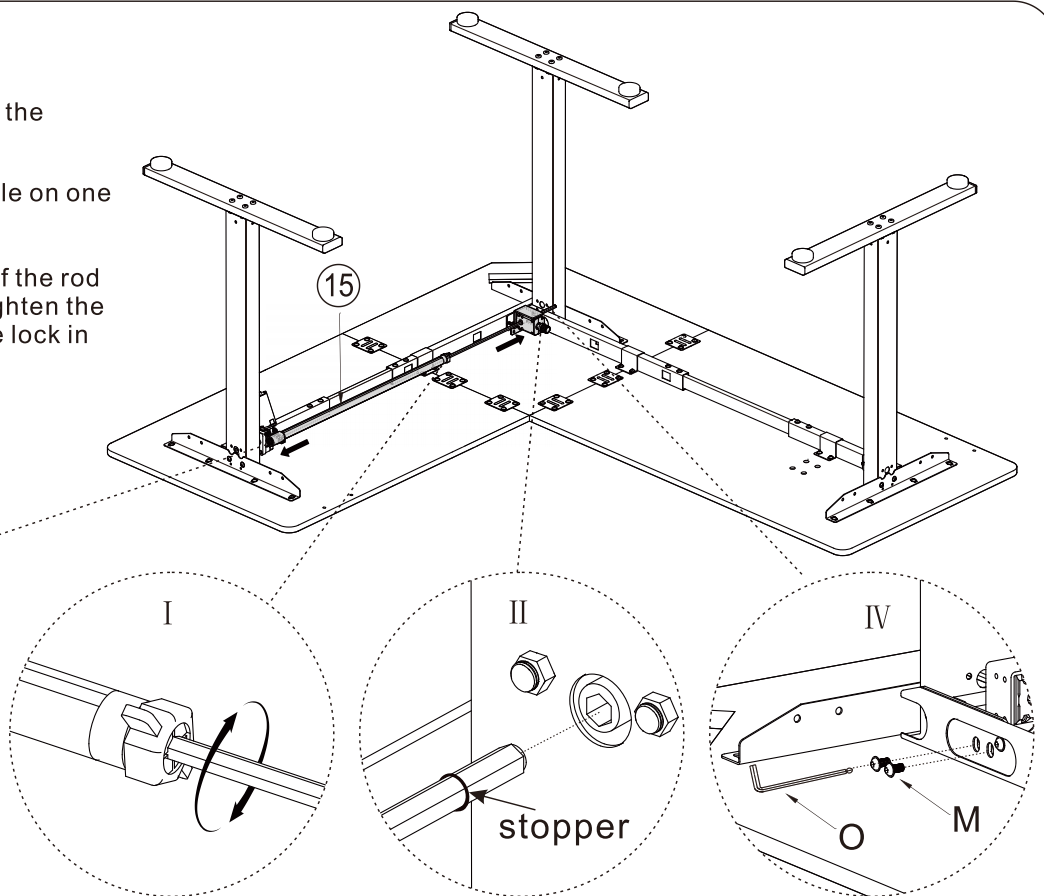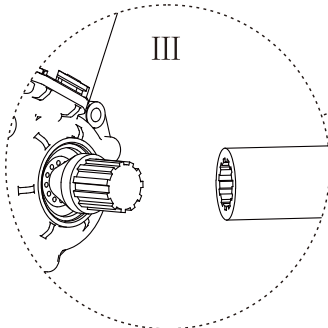

Note: Do not fully tighten the screws until all of them are in place.



Step 10

- I. Rotate the lock to adjust the length of motor rod.
- II. Insert the rod into the hole on one side leg until it stops.
- III. Connect the other side of the rod to the motor, and then tighten the transmission rod and the lock in the middle.

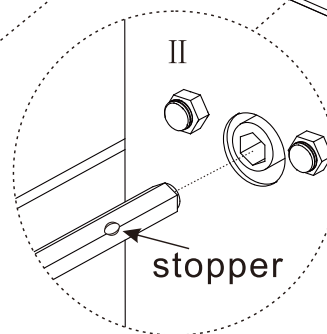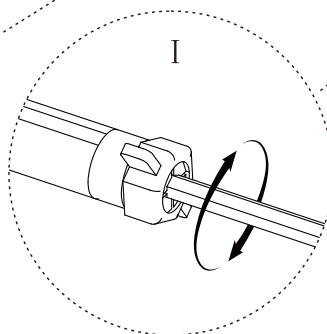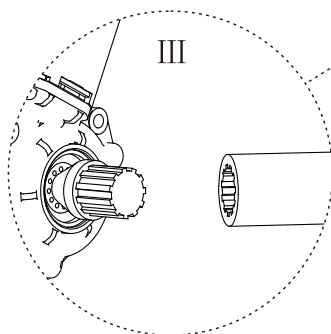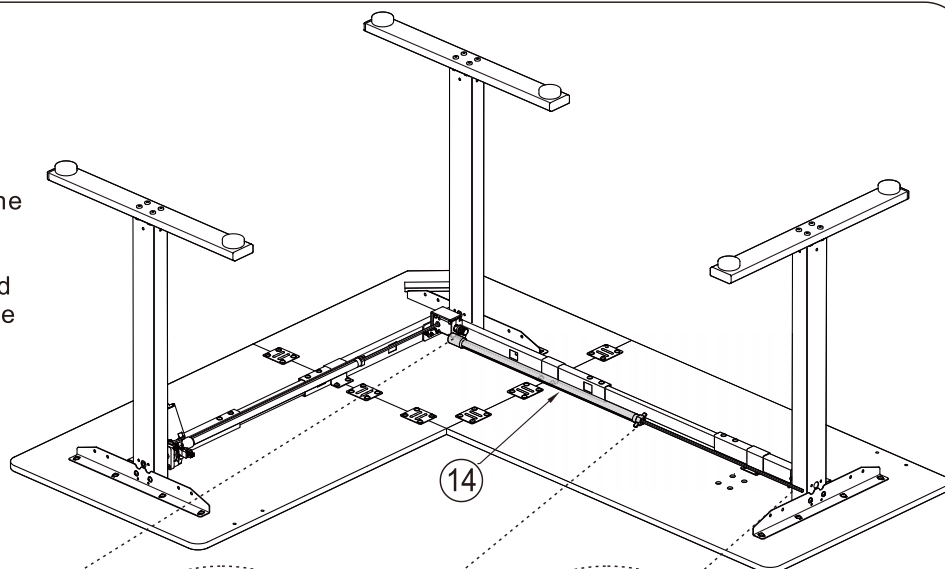

stopper

Step 11

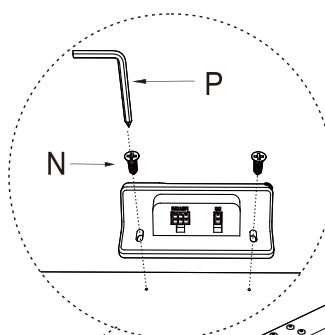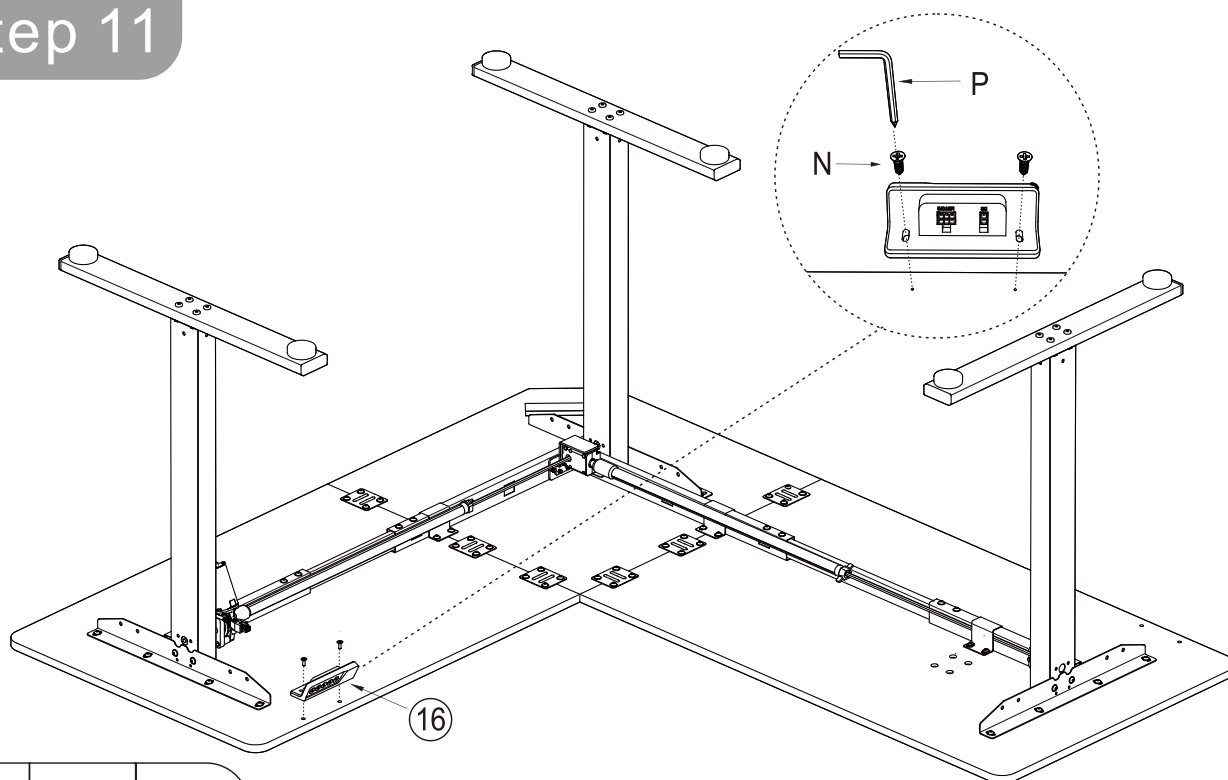

N

P


N		X2
P		X1

Note: Do not fully tighten the screws until all of them are in place.


Step 12

NOTE:

After installation, when flipping the table, place **mats** under the tabletop to protect it. Flip it with two legs in the **same direction**. For tabletop protection and your safety, it's best to have **2 people** do it.

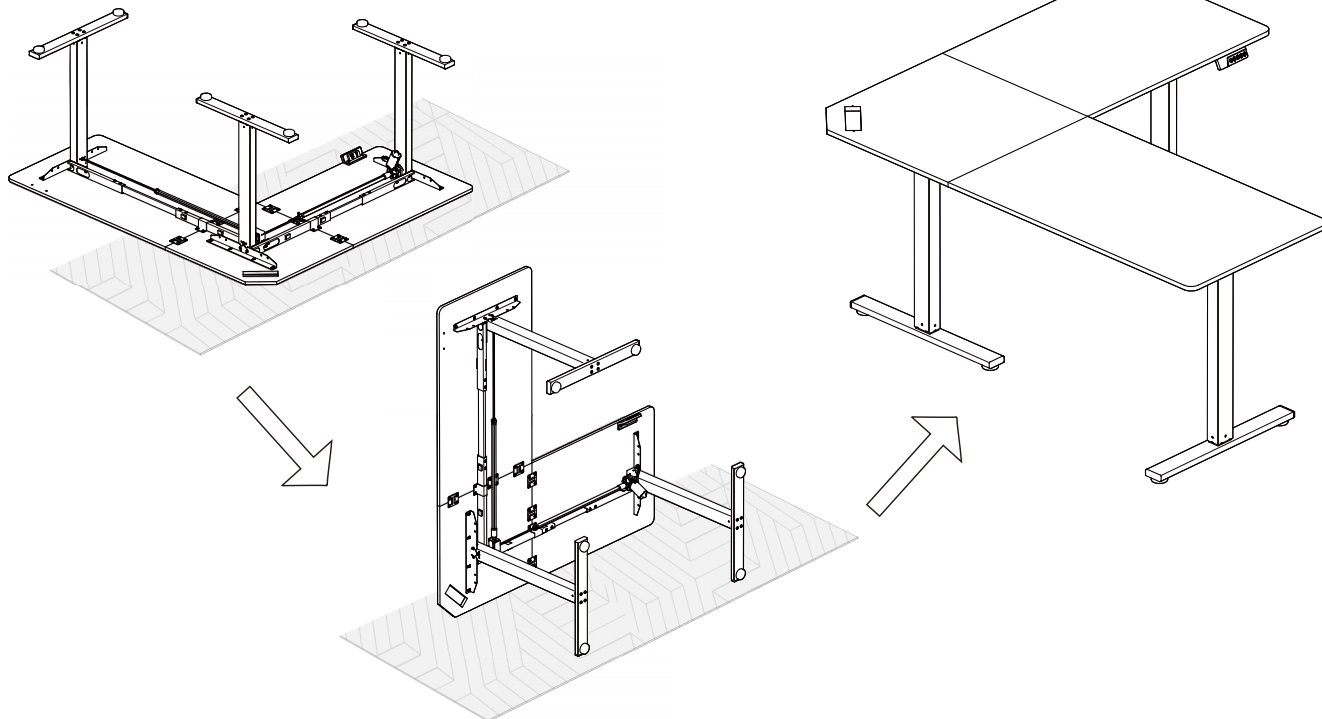





Step 13

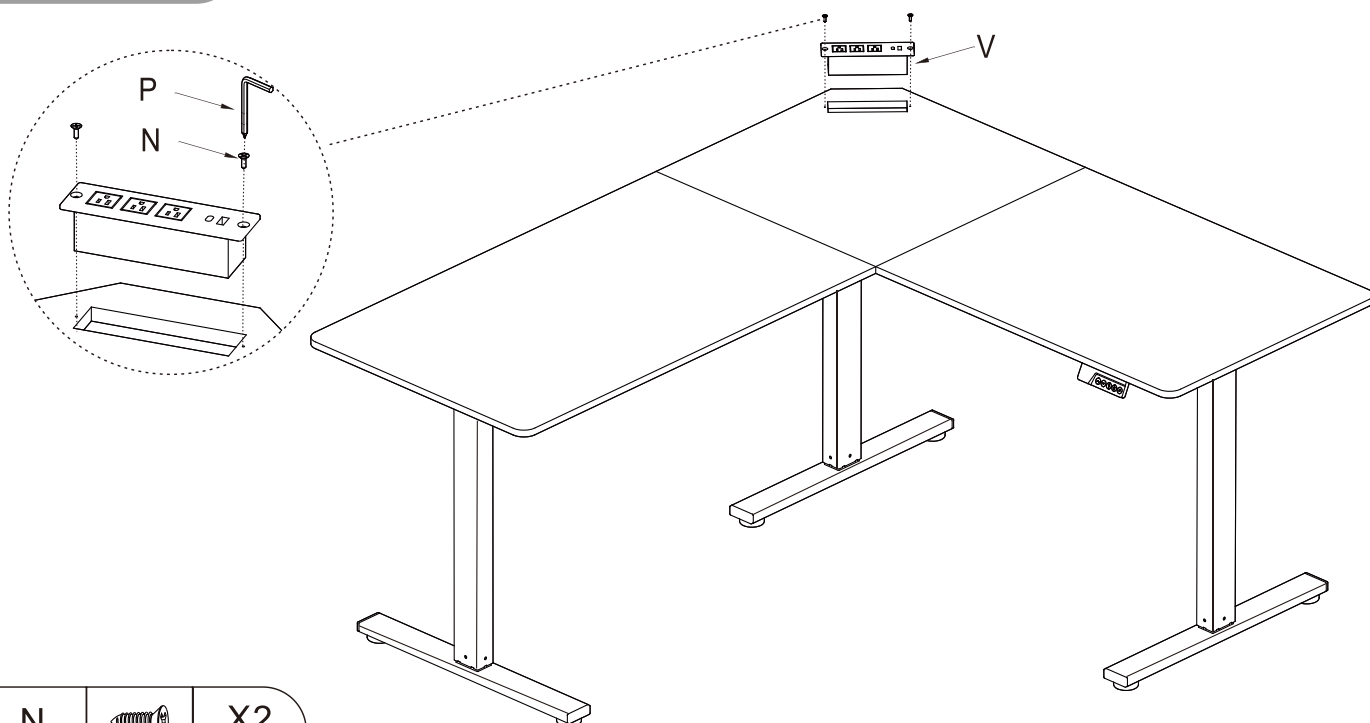

N		X2
P		X1



Note: Do not fully tighten the screws until all of them are in place.

Step 14

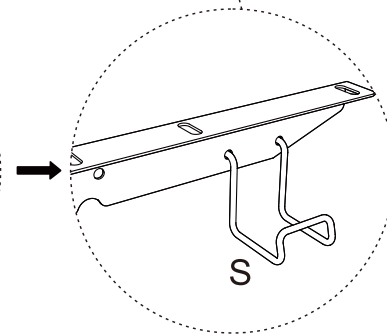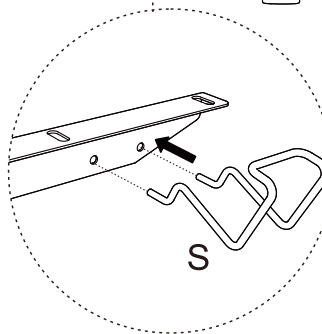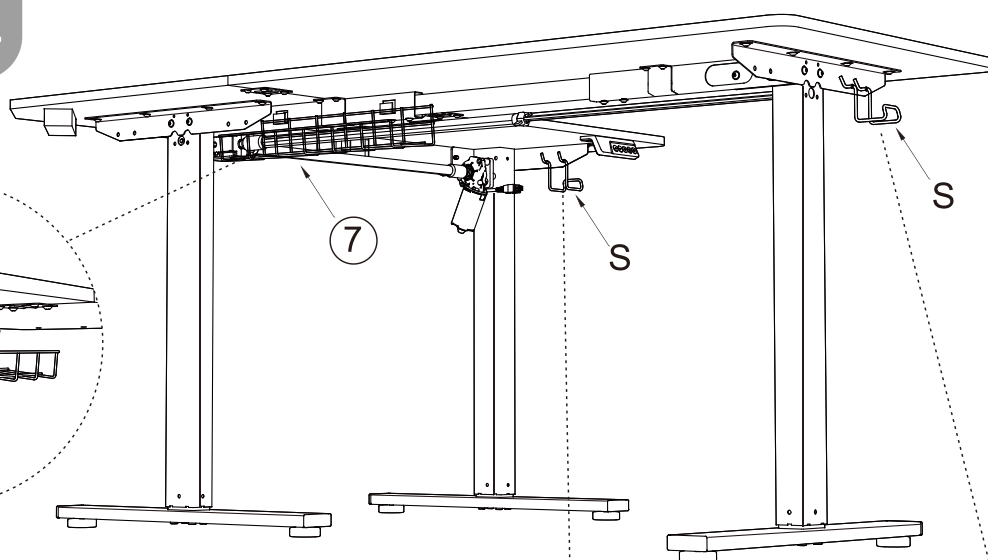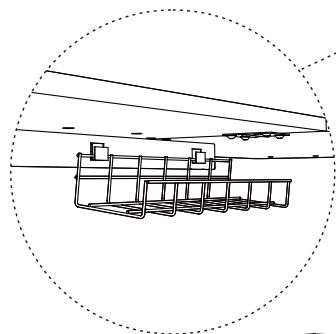


7		X1
S		X2

Step 15

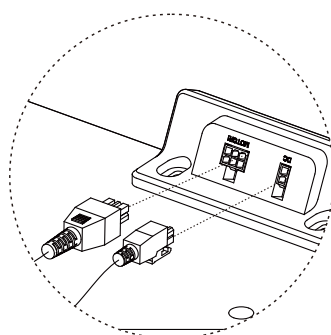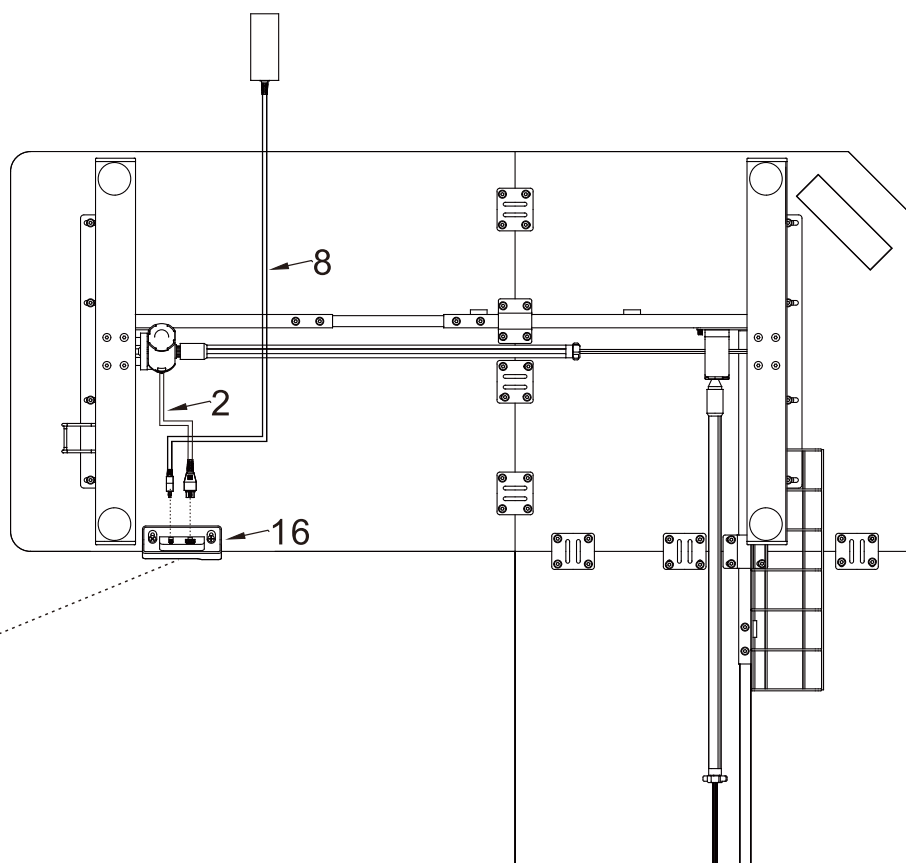

Note: Do not fully tighten the screws until all of them are in place.

Controller Guidelines

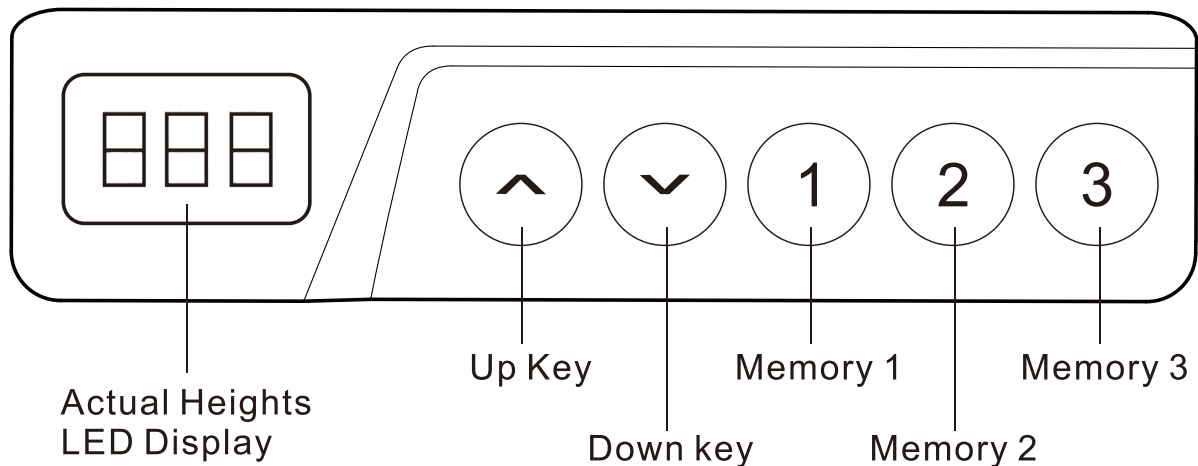

Raise the Desk	Press the "^" button, the desktop upward run, until reach the highest point of the desktop or the button is released.
Lower the Desk	Press "v" button, the desktop run down, until reach the lowest position or the button is released.
Store Position	The hand controller can store to 3 points, the storage method is as follows, Long press any key 1-3 for 3 seconds to set the memory gear; H1, H2, and H3 exit after 2 seconds storage location to the corresponding label at this time.
Select Height Setting	Press the "1" or "2" or "3" button, and the desktop will move to the height that was previously set for that button.
Child Lock	Lock : Hold down the "^"and "v"keys at the same time for 3 seconds. When the manual controller displays LOC , the system is locked and cannot be lifted or lifted. In the locked state. Unlock : Press and hold the "^"and "v"keys for 3 seconds. When the manual display changes from LOC to normal digital display, the system is unlocked.
Initialization Operation/Reset	When the system is abnormal, you need to make standing desk initialized.Initialization operation: Press the "v" button, until the motor stopped then after 5 second, enter the initialization mode automatically.The Led display " rES ". At this time can't loosen the"v"button, if loosen "v" button system initialization stop .The lifting leg slowly descends to the lowest end. When the lifting leg reaches the lowest end and rebounds 0.5cm, the initialization ends.

Error Code Guidelines

Error code	Instructions	How to do?
E31	Abnormal power supply voltage (voltage below 20V).	Replace the power adapter.
E32	Abnormal power supply voltage (voltage higher than 36V).	Replace the power adapter.
Hot	Continuous operation within 5 minutes and the stop interval is less than 10 seconds.	Wait for 15 minutes before exiting the "Hot" state or restart after power off.
E10	Motor line not connected.	Check the connecting line.
E20	Motor over load.	Reduce the load.

If you have any problems installing or using your standing desk, do not hesitate to contact us.

Email: ***Desk-aftersale@outlook.com***